

## RECOMMENDED MOUNTING INSTRUCTIONS

# TALL FLOWERBED SINGLE CHAMBER



### TALL FLOWERBED MOUNTING SET ELEMENTS MADE OF THE TRAPLAST™

Universal mounting instructions for single chamber flowerbed! Model size 1200 × 660 × 530 mm (w × d × h). Regardless of the size/type of flowerbed purchased, always use shorter decking boards ① and ③ for faces and longer decking boards ② and ④ for sidewalls. Validate a number of decking boards forming the wall of your particular flowerbed by comparing with the picture shown on [www.recyklace.cz/eshop](http://www.recyklace.cz/eshop).

- ① decking board 132 × 32 × 600 mm\*, 6 pcs\* - for faces
- ② decking board 132 × 32 × 1200 mm\*, 6 pcs\* - for sidewalls
- ③ decking board 132 × 32 × 600 mm\* (without groove with spring), 2 pcs
- ④ decking board 132 × 32 × 1200 mm\* (without groove with spring), 2 pcs
- ⑤ joist 50 × 50 × 520 mm\*, 4 pcs
- ⑥ screw with recessed head 6 × 70 mm, white zinc-plated, 64 pcs\*

### BEST PRACTICE OF MOUNTING TALL FLOWERBED

We recommend to assemble the Tall Flowerbed made of the Traplast™ where it will stand taking into account its total weight. The joist ⑤ is slightly shorter than the resulting height of the flowerbed sidewall, so decide first whether it will face up with the bottom or upper edge of the sidewall - see the Figure A. If you have selected the facing up with the upper edge of the sidewall, lay a shorter board on two parallel joists ③. The upper decking boards ③ and ④ do not have spring and the groove is at the bottom - see the Figure D. When facing up the joists and the decking board at the bottom, start with the decking board ① while the groove is facing down again. Align the joists with the sides of the decking board and drill a 4 mm diameter hole in its longitudinal axis up to the joist in the distance of 25 mm from each side of the floor. Screw the decking board using the screws ⑥ and assemble the face using other decking board. Attach the decking board ② to the face as shown in the Figure B. Pre-drill the holes for the screws (up to the joist again) in the horizontal axis of the

decking board so that they point to the middle of the joist. We recommend you to horizontally set off the holes from the top and bottom edges of the deck a little differently than on the already assembled face so that screws avoid each other in the joist. Gradually screw other four decking boards ② one after the other and end with the decking board without the spring ④.




\* The values given are for the flowerbed version in the size of 1200 × 660 × 530 mm (width × depth × height). The number of pieces and their length vary according to the chosen size of the flowerbed.

! When working / assembling, use the protective equipment!

## BEST PRACTICE OF MOUNTING TALL FLOWERBED

Mount the other half of the tall flowerbed from the remaining decking boards and joists in the same manner. Join both halves together as shown in the Figure E. Drill the loose ends of the decking boards and screw them with joists, using the remaining screws. The Tall Flowerbed is now ready for use.

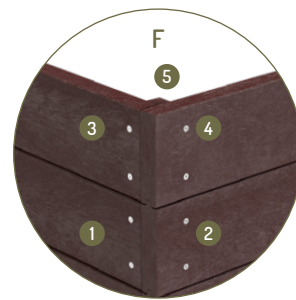

E



\* The values given are for the flowerbed version in the size of 1200 x 660 x 530 mm (width x depth x height). The number of pieces and their length vary according to the chosen size of the flowerbed.

! When working / assembling, use the protective equipment!